



# FLEXSCREEN

## THE WORLDS FIRST FLEXIBLE WINDOW SCREEN



### SIMPLE DESIGN

#### EASY TO USE

FlexScreen springs into the opening, making installing and removing our screens easy.

#### EASY TO CLEAN

Traditional screens get in the way when cleaning. FlexScreen's low-profile design allows water to cascade over the screen frame.

#### EASY TO STORE

Because of FlexScreen's low-profile frame design, ten screens can fit in a three inch deep box!



### DAMAGE RESISTANT

#### DENT RESISTANT

FlexScreen is tough; produced out of PVC coated, carbon enriched, spring steel.

#### BREAK RESISTANT

Throw it, drop it, abuse it, even run it over with your car! FlexScreen's frame won't dent or break.

#### SCRATCH RESISTANT

The tough powder coated steel frame resists scratching and provides protection for the extreme outdoor elements.



### BEAUTIFULLY INVISIBLE

#### BETTER LOOKING

FlexScreen disappears in the window frame, beautifying your view to the outside.

#### A NICER VIEW

FlexScreen provides a greater viewing area by eliminating the bulky screen frame found in traditional window screens.

#### A MATCH MADE

Most screens don't match your window. FlexScreen disappears when installed so there are no colors to match.



*We Enthusiastically Look Forward To Your Order!*


THE WORLD'S FIRST FLEXIBLE WINDOW SCREEN

## INSTALLATION GUIDE

Begin by opening or tilting both sashes of your window toward the inside of the house to expose the window screen track. Wrap your hands around FlexScreen's longest sides, squeeze the sides together 4"-6", and feed it completely through the window opening.


### STEP 1

While keeping the sides compressed, aim FlexScreen's first corner to one of the top corners of the window screen track and seat it into the track.

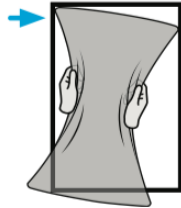


### STEP 3

Keeping both sides squeezed together, insert FlexScreen into one of the bottom corners. It may help to lift slightly if your window has a lip on the sill. Release this side of the screen once it has been seated.

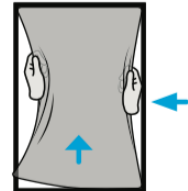


### STEP 2

Aim the second corner to the opposite top corner of the window screen track and guide it into the track.

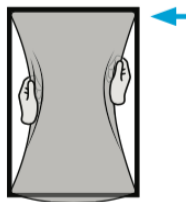

### STEP 4

Aim FlexScreen's last corner into the remaining corner of the screen track. Lifting slightly may be helpful for this step as well. Release FlexScreen completely once all corners are seated properly.

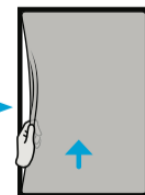


Close your window and enjoy your completely uninterrupted view!

## REMOVAL GUIDE

Begin by opening or tilting both sashes of your window toward the inside of the house to expose the window screen track.


### STEP 1

Gently press the palm of your hand in the center of the screen until you can wrap your hands around the FlexScreen frame. Squeeze both sides inward 4"-6".

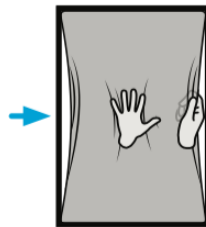


### STEP 3

Remove the opposite bottom corner from the screen track.

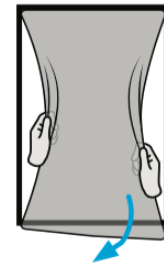


### STEP 2

While keeping the sides compressed, lift up the FlexScreen and remove one of the bottom corners from the screen track.

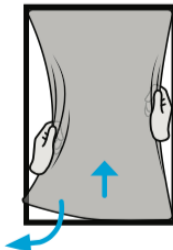

### STEP 4

With both corners out of the screen track, pull FlexScreen down from the top screen track and remove the screen.

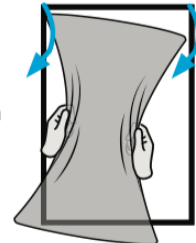

Learn more [www.flexscreen.com/fullscreen](http://www.flexscreen.com/fullscreen)